

WARRANTY

All fiber optic transmission systems, products and accessories manufactured by Liteway, Inc. and its subsidiaries are fully tested prior to shipment and are warranted against defective materials and workmanship for a period of two full years from the date of the original shipment. Should a problem occur, a Return Material Authorization Number (RMA) must be obtained from Liteway Inc. at (516) 931-2800 and the item returned to Liteway, Inc. 166 Haverford Road, Hicksville, NY 11801, USA, prepaid. Liteway Inc. will then, at its option repair or replace the defective item.

Liteway, Inc. maximum liability under this warranty is limited to the cost of the defective item only. No contingent liabilities of any kind are either assumed or implied.

Any items returned to Liteway, Inc. that have been misused, abused, damaged, modified, connected or adjusted in any way contrary to the instructions furnished by Liteway, Inc. or repaired by unauthorized personnel will not be covered by this warranty. Any non-warranty repairs required will be quoted at the current rate for such services.



Important Notices



CAUTION ! AVOID DIRECT EXPOSURE TO BEAM.

All -5, -7, -8, and -9 Models use laser diodes. These solid-state laser diodes are located in the optical ports of these units. Laser diodes produce invisible radiation that may be harmful to human eyes. Never look directly into the optical port of any fiber optic unit designed to operate with single-mode optical fiber.

NOT FOR LIFE SUPPORT SYSTEMS

Liteway, Inc. does not authorize or warrant any of its products or accessories for use in critical life support systems or applications of any kind.

OPERATING INSTRUCTIONS

Optical 1x1 Switch

Single Channel Models OS-3111

Dual Channel Models OS-3211



The OS-3111 is a fiber optic switch that can be remotely controlled. The optical path through the units is purely optical; i.e. there is no optical to electrical to optical conversion. There is no electrical loss or electrical bandwidth limit on the fiber optic path. The optical path can be select via a front panel switch or via contact closure input. In event of loss of power, the unit has a failsafe mode that returns the switch to the normally open mode. Common applications for this device are optical routing, system bypass, ring network restoration, and loop-back testing.

Technical Specifications

Switching Time	< 10 ms
Back Reflection	< -50 dB
Insertion Loss	< 1.3 dB
Cross-talk	< -50 dB
Mechanical Life	> 1 Million cycles
Electrical Connector	5 pin removable terminal block
Temperature Range	-35° to +70°C
Operating Power Requirements	11-24 VAC/DC @150 mA -48 VDC (+/-2) for OS-1202, OS-2202
Physical Size (mm) single	5.0"(127)L x 1.0" (25.4)W x 3.0"(7)D
Physical Size (mm) dual	5.0"(127)L x 2.2" (56.6)W x 3.0"(7)D

Models, wavelength, connector


-3 = 850/1310nm Multi-mode ST/PC	-4 = 850/1310nm Multi-mode- SC/PC
-5 = 850/1310nm Single-mode SC/PC	-7 = 1310/1550nm Single-mode FC/PC

Specifications are subject to change without prior notice.

Installation Instructions

Common applications for this device are optical routing, system bypass, ring network restoration, and loop-back testing.

The diagram below shows the typical application of the OS-3111.

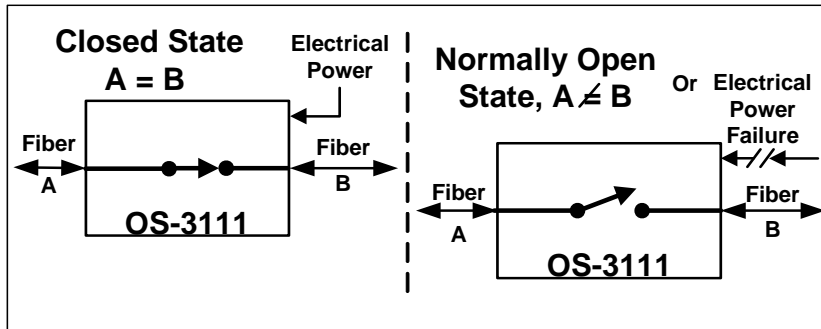

The OS-3111 switch will go into the open state under any of the following conditions:

- 1) There is a loss of electrical power
- 2) The front panel mode switch is put into the open mode
- 3) The rear panel control signal is grounded

For applications where two independent optical channels need to be switched, such as dual SONET rings, the OS-3211 is two OS-3111 in a single enclosure.

Power Signal Terminal Block Connections

Pin	Label	Function
1	Pwr+	+11 to + 24 Volts AC/DC
2	Pwr-	Return or Ground (also case ground)
3	Alm	Alarm* = gnd when optical switch is in the closed state = Open when optical switch is in the open state
4	Ctl	Control Signal (Connect to ground to place switch in open state)
5	Gnd	Ground

* The Alarm signal can be used with the ALM-1000 unit to provide an audible alarm and dry contacts for remote station monitoring.

Indicator Lights

Indicator	Lights when
Power	Proper power is present
Open	There is an open optical path through the switch.
Closed	There is a closed optical path through the switch.

Front Panel Open /Closed Mode Selector

When in Closed mode, the optical switch will always remain in the closed state. That is this switch has priority over the rear control signal and weather power is present.

When in Open mode, the optical switch can be controlled by the rear control signal or presence of power.

Optical Connector Signal Paths

The optical signal path for the OS-3111 is port A to port B

The optical signal paths for the OS-3211 are port A to port B
And port C to port D